

## To make calls FROM the Phone:

- ◆ Move to a position where there is clear view of the sky.
- ◆ Power on the phone and enter PIN (**as set up**) press OK



Rotate and extend the Antenna (ensure Antenna is attached correctly and in a Vertical position as shown)



- ◆ To Call Other Iridium Phones dial: 00 8816 \_\_\_\_ \_ Then Press OK.
- ◆ To Call **SYDNEY** dial: 00 61 2 \_\_\_\_ \_ Then Press OK. (e.g., 00 61 2 8436 2100)
- ◆ To Call **International** dial: 00 +Country Code + Area Code without Leading '0' + Phone Number \_\_\_\_ \_ Then Press OK.
- ◆ To Call an **Australian Mobile Phone** dial: 00 61 (drop the leading '0') 414 250 295.

There will be a slight delay on the Calls.

**GENERAL RULE:** DIAL "00" Then Country Code + Area Code without Leading '0' then Phone Number.

## To make calls TO EMERGENCY NUMBERS within Australia:

Within **Australia** dial **000** or **112**

### To access the services listed below:

Press MR = Memory Recall button at bottom of phone

Enter location will appear

Press OK

Use scroll down button to locate the required phone number for:

The Royal Flying Doctor Service (RFDS)

RFDS Broken Hill 0061880881188

RFDS Port Augusta 0061886425555

RFDS Charleville 0061746541443

RFDS Mt Isa 0061747432802

RFDS Alice Springs 0061889521033

RFDS Yulara 0061418817698

RFDS WA 0061894176364

RFDS Kalgoorlie 0061890937500

Or

NSW Ambulance Service 0061283965170

Press OK

## To make calls TO EMERGENCY NUMBERS Overseas:

Within the **USA** dial **112**

For other countries the customer should obtain a local emergency contact number.

DIAL "00" Then Country Code + Area Code without Leading '0' then the Emergency Number.

RENTING		Global and Local		SATELLITE
<i>Hand Held</i>	<i>Video via Satellite</i>	<i>ISDN via Satellite</i>		<i>144KB/S Data via Satellite</i>

## To make calls TO the Phone:

- ♦ FROM **AUSTRALIA** dial:  
0011 8816 \_ \_ \_ \_ \_
- ♦ FROM **ANYWHERE** else dial  
"International Access" 8816 \_ \_ \_ \_

## To Leave a Message for this Phone

- ♦ To leave a message from a Landline or a Mobile Phone (other than Iridium)  
a voice will ask you to re enter the number you are calling
- ♦ Re enter number eg. 8816 314 .....
- ♦ A voice message will ask you to leave a message

When a Call is Received **Rotate & Extend** the Antenna in a Vertical position as shown



## **MESSAGING: Voice Mail:**

Press  Button

- "Call Voicemail. Select?" will appear.
- Press **OK** button. This will automatically call the mailbox number programmed.

- A voice will say "You have now accessed the Iridium Messaging Centre. Please re-enter the phone number of the person you are trying to reach "
- Enter your own Iridium phone number, (8816 314 xxxxx)
- **Wait for the greeting message to begin, THEN PRESS THE \* BUTTON TO INTERRUPT THE GREETING MESSAGE.**
- You will be asked to enter the Password (**as set up**)
- You are into the Main menu. **PTO**
- Listen to voice which will tell you how many messages you have. Then follow prompts
- **Read 1**
- **Delete 7**
- **Save message 9**

Note: Make sure you delete messages you no longer require otherwise if the Mail Box gets full you will not be able to receive messages.

## **User tip for Message and Voicemail Retrieval**

This procedure will prompt the satellite service to send messages to the phone:

- Check that you have coverage and "IRIDIUM" is displayed on the screen.
- Dial **1234** then Press OK
- You will hear a message "You have now accessed the Iridium Satellite Gateway ."
- Press OK to disconnect the call.

(Normally used if the phone has been switched off) This call is FREE.

---

<b>RENTING</b>		<b>Global and Local</b>		<b>SATELLITE</b>
<i>Hand Held</i>	<i>Video via Satellite</i>	<i>ISDN via Satellite</i>		<i>144KB/S Data via Satellite</i>

---

## To make calls FROM the Phone:

- ◆ Move to a position where there is clear view of the sky.
- ◆ Power on the phone and enter PIN (**as set up**) press OK



Rotate and extend the Antenna (ensure Antenna is attached correctly and in a Vertical position as shown)



- ◆ To Call Other Iridium Phones dial: 00 8816 \_\_\_\_ \_ Then Press OK.
- ◆ To Call **SYDNEY** dial: 00 61 2 \_\_\_\_ \_ Then Press OK. (e.g., 00 61 2 8436 2100)
- ◆ To Call **International** dial: 00 +Country Code + Area Code without Leading '0' + Phone Number \_\_\_\_ \_ Then Press OK.
- ◆ To Call an **Australian Mobile Phone** dial: 00 61 (drop the leading '0') 414 250 295.

There will be a slight delay on the Calls.

**GENERAL RULE:** DIAL "00" Then Country Code + Area Code without Leading '0' then Phone Number.

## To make calls TO EMERGENCY NUMBERS within Australia:

Within **Australia** dial **000** or **112**

### To access the services listed below:

Press MR = Memory Recall button at bottom of phone

Enter location will appear

Press OK

Use scroll down button to locate the required phone number for:

The Royal Flying Doctor Service (RFDS)

RFDS Broken Hill	0061880881188
RFDS Port Augusta	0061886425555
RFDS Charleville	0061746541443
RFDS Mt Isa	0061747432802
RFDS Alice Springs	0061889521033
RFDS Yulara	0061418817698
RFDS WA	0061894176364
RFDS Kalgoorlie	0061890937500

Or

NSW Ambulance Service 0061283965170

Press OK

## To make calls TO EMERGENCY NUMBERS Overseas:

Within the **USA** dial **112**

For other countries the customer should obtain a local emergency contact number.

DIAL "00" Then Country Code + Area Code without Leading '0' then the Emergency Number.

RENTING		Global and Local		SATELLITE
<i>Hand Held</i>	<i>Video via Satellite</i>	<i>ISDN via Satellite</i>		<i>144KB/S Data via Satellite</i>

## To make calls TO the Phone:

- ◆ FROM **AUSTRALIA** dial:  
0011 8816 \_ \_ \_ \_ \_
- ◆ FROM **ANYWHERE** else dial  
"International Access" 8816 \_ \_ \_ \_

## To Leave a Message for this Phone

- ◆ To leave a message from a Landline or a Mobile Phone (other than Iridium)  
a voice will ask you to re enter the number you are calling
- ◆ Re enter number eg. 8816 314 .....
- ◆ A voice message will ask you to leave a message

When a Call is Received **Rotate & Extend** the Antenna in a Vertical position as shown



## **MESSAGING: Voice Mail:**

Press  Button

- "Call Voicemail. Select?" will appear.
- Press **OK** button. This will automatically call the mailbox number programmed.

- A voice will say "You have now accessed the Iridium Messaging Centre. Please re-enter the phone number of the person you are trying to reach "

- Enter your own Iridium phone number, (8816 314 xxxxx)

- **Wait for the greeting message**

**to begin, THEN PRESS THE \*  
BUTTON TO INTERRUPT THE  
GREETING MESSAGE.**

- You will be asked to enter the Password (**as set up**)
- You are into the Main menu. **PTO**
- Listen to voice which will tell you how many messages you have. Then follow prompts
- **Read 1**
- **Delete 7**
- **Save message 9**

Note: Make sure you delete messages you no longer require otherwise if the Mail Box gets full you will not be able to receive messages.

## **User tip for Message and Voicemail Retrieval**

This procedure will prompt the satellite service to send messages to the phone:

- Check that you have coverage and "IRIDIUM" is displayed on the screen.
- Dial **1234** then Press OK
- You will hear a message "You have now accessed the Iridium Satellite Gateway ."
- Press OK to disconnect the call.

(Normally used if the phone has been switched off) This call is FREE.

---

RENTING		Global and Local		SATELLITE
<i>Hand Held</i>	<i>Video via Satellite</i>	<i>ISDN via Satellite</i>		<i>144KB/S Data via Satellite</i>

---